


RZR XP SINGLE SEAT CARGO RACK

DOCUMENT: P1-41-210B_INST.PDF • LAST UPDATED: JUNE 2020

Thank you for purchasing this item from **CSD Racing Products!** Please read through this entire document before proceeding with installation. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Check your packages immediately upon arrival to ensure that everything listed is included, and to check for damage during shipping.

APPLICATIONS

These installation instructions apply to the following CSD Racing Products:

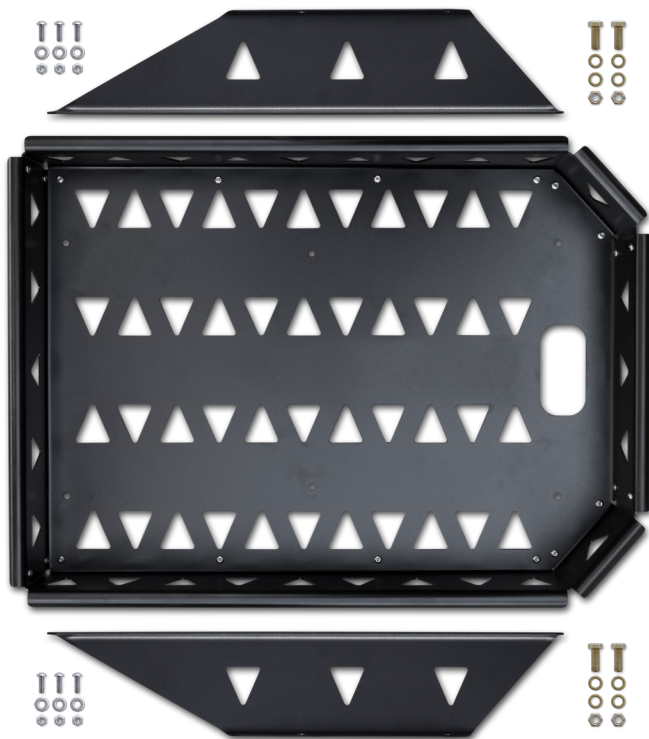

P1-41-210B RZR XP Single Seat Cargo Rack

INCLUDED COMPONENTS

Please check your packages immediately upon arrival to ensure that everything listed is included, and to check for damage during shipping. If anything is missing or damaged, contact CSD Racing Products.

- 1** SINGLE SEAT CARGO RACK (PRE-ASSEMBLED)
- 1** LH CARGO RACK MOUNT BRACKET*
- 1** RH CARGO RACK MOUNT BRACKET*

*Items may come pre-installed/pre-assembled

PRE-INSTALLED HARDWARE:

- 20** #10-32 X 1/2 SS BUTTON HEAD CAP SCREW
- 20** #10-32 SS NYLON INSERT LOCK NUT
- 20** #10 FLAT WASHER

HARDWARE KIT

- 4** 3/8-24 X 1 GR8 HEX HEAD CAP SCREW
- 4** 3/8-24 GR8 NYLON INSERT LOCK NUT
- 8** 3/8 AN FLAT WASHER
- 6** 1/4-28 X 3/4 SS BUTTON HEAD CAP SCREW*
- 6** 1/4 SS FLAT WASHER*
- 6** 1/4-28 SS NYLON INSERT LOCK NUT*

*Items may come pre-installed/pre-assembled

TOOLS NEEDED

- Ratchet or Driver
- Torx T27 Driver Bit
- 1/8 & 5/32 Hex Key or Driver Bit
- 3/8, 7/16 & 9/16 Socket or Wrench

INSTALLATION PROCEDURE

- 1. Secure the vehicle and wear safety gear.** Park the vehicle on a flat, level surface and set the parking brake. Wear safety glasses from this point forward.
- 2. Remove the seat from the vehicle.** Your RZR's seats are easily removable. Reach behind the seat to release the latch, and lift the seat out of the vehicle. If necessary, refer to the vehicle User Manual for further instructions on removing the seat.
- 3. (Optional) Remove the OE Seat Mount from the Seat.** The Seat Cargo Rack attaches to the seat mount in order to utilize the same convenient one-latch install and removal procedure the seats have. The Cargo Rack is designed to attach to either the OE (stock) seat mount or to CSD Racing's Steel Seat Mount. If you will be using the OE Seat Mount, use a Torx T27 driver bit to remove the four bolts, and then remove the seat mount. Leave the square-tube spacers with the seat, as they won't be used with the Cargo Rack.

ABOUT SEAT MOUNTS. You have a choice between using the RZR's original stock seat mount or CSD's heavy duty RZR Steel Seat Mount (part number P1-43-210B, sold separately). We of course recommend the CSD mount for strength and durability, but the rack is designed to work with the plastic OE mount as well. If you will be alternating between running the seat and this Cargo Rack on different trips, it might be more convenient for each item (the seat and the Cargo Rack) to have its own seat mount so you're not having to move the mount from item to item. If you choose to purchase a CSD Steel Seat Mount as your ad-

ditional mount, we recommend using it to mount the seat, and use the stock plastic mount for this rack.

4. Attach the Cargo Rack Mount Brackets to the Seat Mount. Use a 9/16 socket and wrench, with the supplied 3/8-24 X 1 GR8 HEX HEAD CAP SCREWS, 3/8-24 GR8 NYLON INSERT LOCK NUTS and 3/8 AN FLAT WASHERS to fasten the Cargo Rack Mount Brackets to either the OE Seat Mounts or CSD Racing Steel Seat Mounts. Orient the Mount Brackets so that the flanges with the bolt holes are pointed inward, toward the center of the seat mount, with the long, sharper angled end pointed in the direction of the front of the seat mount. The shorter angled end will be toward the rear. See Figure 1 for reference. Do not fully tighten these fasteners yet; just leave them finger-tight.

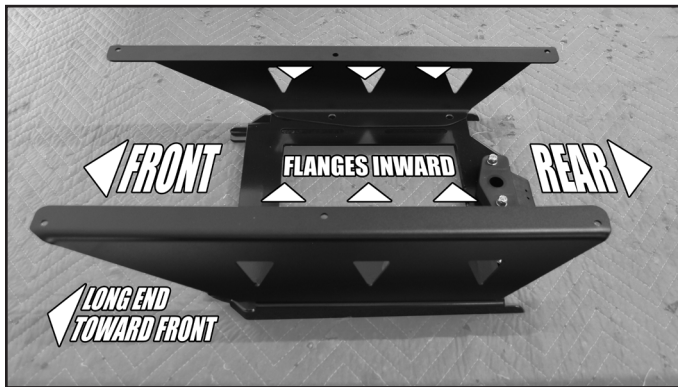


Figure 1.

NOTE: If your Cargo Rack came with the Mount Brackets pre-assembled on to the Cargo Rack, the previous step still applies however the Rack will already be attached to the Mount Brackets, and the following step will be skipped.

5. Attach the Cargo Rack to the Mount Brackets. Place the pre-assembled Seat Cargo Rack on to the Mount Brackets (which were attached to the seat mounts in the previous step). Make sure that the end of the Cargo Rack with the 45° beveled corners is oriented toward the rear of the Seat Mount. Align the six (6) bolt holes in the floor of the Cargo Rack with the corresponding holes in the upper flange of the Mount Brackets. Use the supplied 1/4-28 X 3/4 SS BUTTON HEAD CAP SCREWS, 1/4 SS FLAT WASHERS and 1/4-28 SS NYLON INSERT LOCK NUTS to attach the Cargo Rack to the Mount Bracket, making sure that the button heads are on top. Snug the fasteners with a 5/32 hex key or driver and 7/16 socket or wrench, but do not fully tighten them yet.

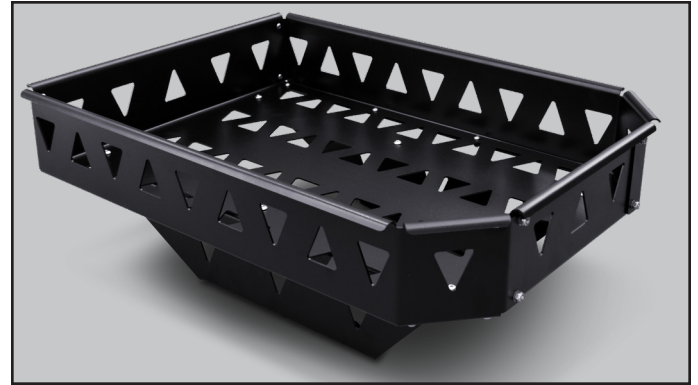


Figure 2.

- 6. Tighten All Fasteners.** Go back over the entire assembly and tighten each fastener as you go, including any fasteners that came pre-assembled.
- 7. Install the Cargo Rack into the Vehicle.** Place the Cargo Rack into location where the seat was previously removed, locking it into the seat mount latches as if you were re-installing the seat.

Congratulations! You have completed the installation of the CSD Racing Products RZR XP Double Seat Cargo Rack! Keep reading for important information from CSD Racing Products, and keep these instructions for future reference.



CSD RACING PRODUCTS - 5-YEAR LIMITED WARRANTY

Items manufactured and sold by CSD Racing Products (hereinafter "CSD") are covered under a 5-year warranty against manufacturing defects and workmanship. This Warranty applies to the CSD-manufactured structural components ONLY.

For a period of 5 years from the retail purchase date, CSD warrants to the original retail purchaser that its products are free from defects in material and workmanship. All other warranties and representations, expressed or implied, are hereby disclaimed, including fitness for merchantability

and buyer's intended use or purpose. Buyer assumes all risks as to the selection, suitability and performance of all CSD products purchased. This limited warranty does not cover damage or impairment in any part due to misuse or use in racing or other forms of competition, improper installation, accident or contact with on-road or off-road hazards, product modification, improper or inadequate cleaning and/or maintenance. Product purchased "used" or "open box" are not covered under warranty. CSD is not responsible for items damaged during shipping. This warranty is not transferable from the original buyer.

CSD's 5-Year Limited Warranty covers CSD-manufactured structural components only. It does not cover paint or powder coat finish, electrical and wiring products, or any other components or processes performed by secondary vendors.

For the original Buyer to be eligible for the limited warranty coverage, the Buyer must provide proof of purchase. Customer's remedy hereunder shall be limited only to repair or replacement (at CSD's option) of any defective part(s) returned to CSD at customer's expense. The determination of whether or not a returned part is defective or subject to coverage under the limited warranties stated herein shall be made at CSD's sole discretion.

This Warranty does not apply to items manufactured by other companies and sold by CSD, individually or as part of a kit or assembly. Such items are covered only under their respective manufacturer's Warranty. Remedies under other manufacturers' warranties should be pursued directly with the manufacturer.

To file a Warranty Claim, please contact CSD via email at pitcrew@csdracingproducts.com to request a warranty claim form.